


Rectangular Wall Mirror

MOEBE

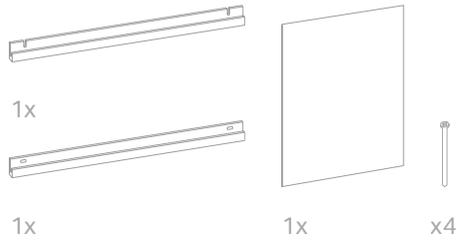

REQUIRED:




Drill




Water level

1

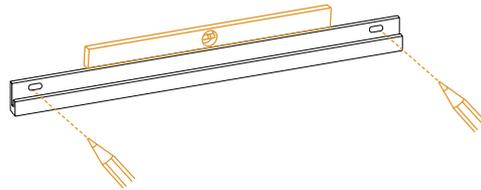


Hold the lower list - the list with horizontal holes - against the wall, make sure it is leveled. Use the two holes to mark where to drill.

2

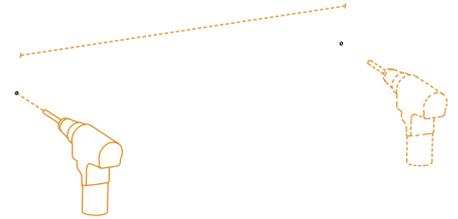


Drill the two holes and insert adequate wall plugs suited for you wall type.

3

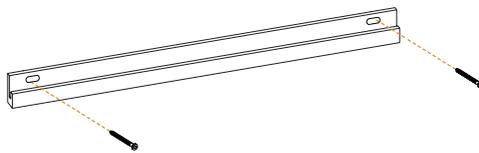

Screw the lower list onto the wall.


4

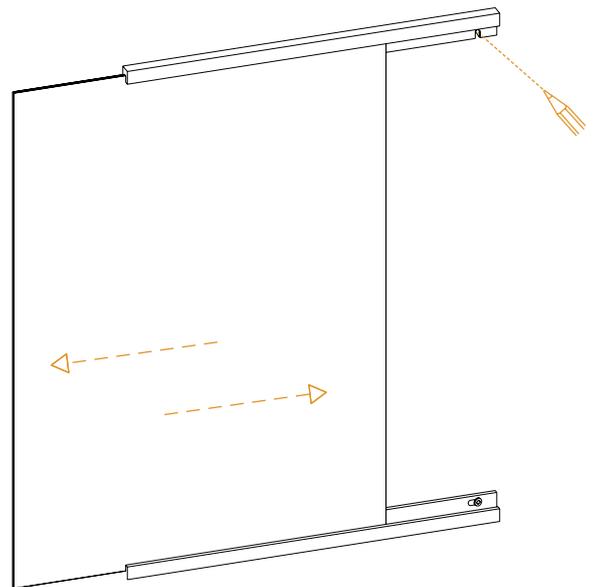


Place both the mirror and the upper list - the list with vertical holes - loosely on the bottom list, remember to hold it in place to prevent it from falling. Slide the mirror to both sides and mark where to drill.

Rectangular Wall Mirror


MOEBE

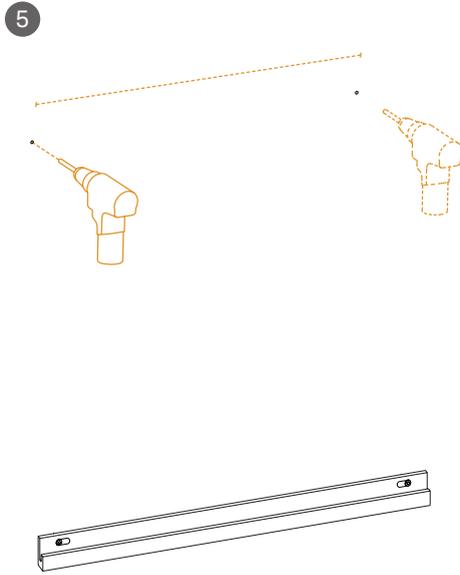


Drill the two holes and insert adequate wall plugs suited for you wall type.

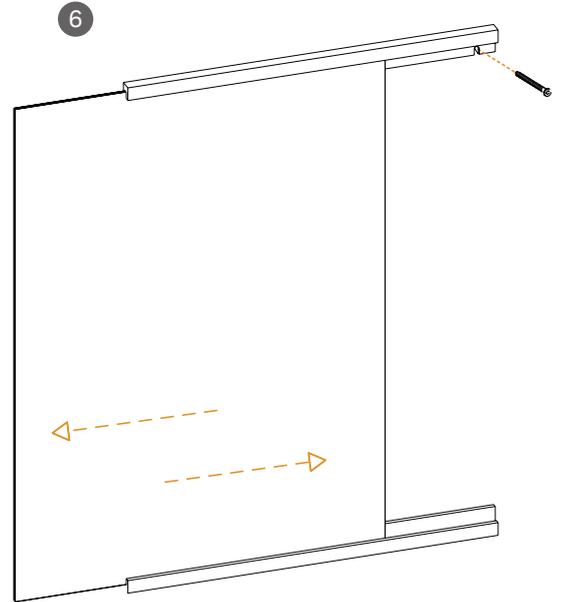

Place both the mirror and the upper list loosely on the bottom list, remember to hold it in place to prevent it from falling. Slide the mirror to both sides and screw the upper list onto the wall. Lastly, slide the mirror glass into place.

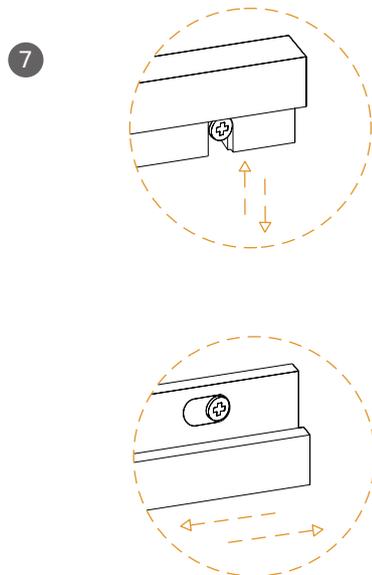

If the lists are not completely aligned, simply adjust the positions of them by sliding the elongated holes along the screws.

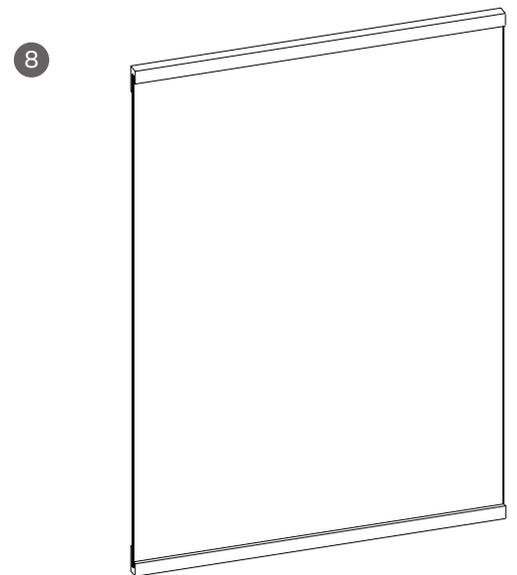

Done!